

Instructions for Using ER Remote Management Software



5G Industrial Router

Directory

1、 Remote management (Instructions for using IOTClient)	3
1. Software download and installation	3
2. Account login.....	3
3. Add a device	3
4. Group management.....	6
5. Device sharing	7
6. Remote configuration	7

1、Remote management (Instructions for using IOTClient)

1. Software download and installation

Go to the <https://en.iotrouter.com/download-page/> website and click *Data Download* to enter the download page, where you can download the remote management software of ER5000 series products.

2. Account login


Open the remote software and log in via Email or account password.




3. Add a device

After logging in to the account, click Add Device in the lower left corner, where SN is viewed in the login of the device, the password is the password of remote management,


the name is a custom name, and click Finish after entering. (Each device has a unique SN, and after the device is bound, others cannot bind it again, unless the owner deletes the device under the corresponding account.)

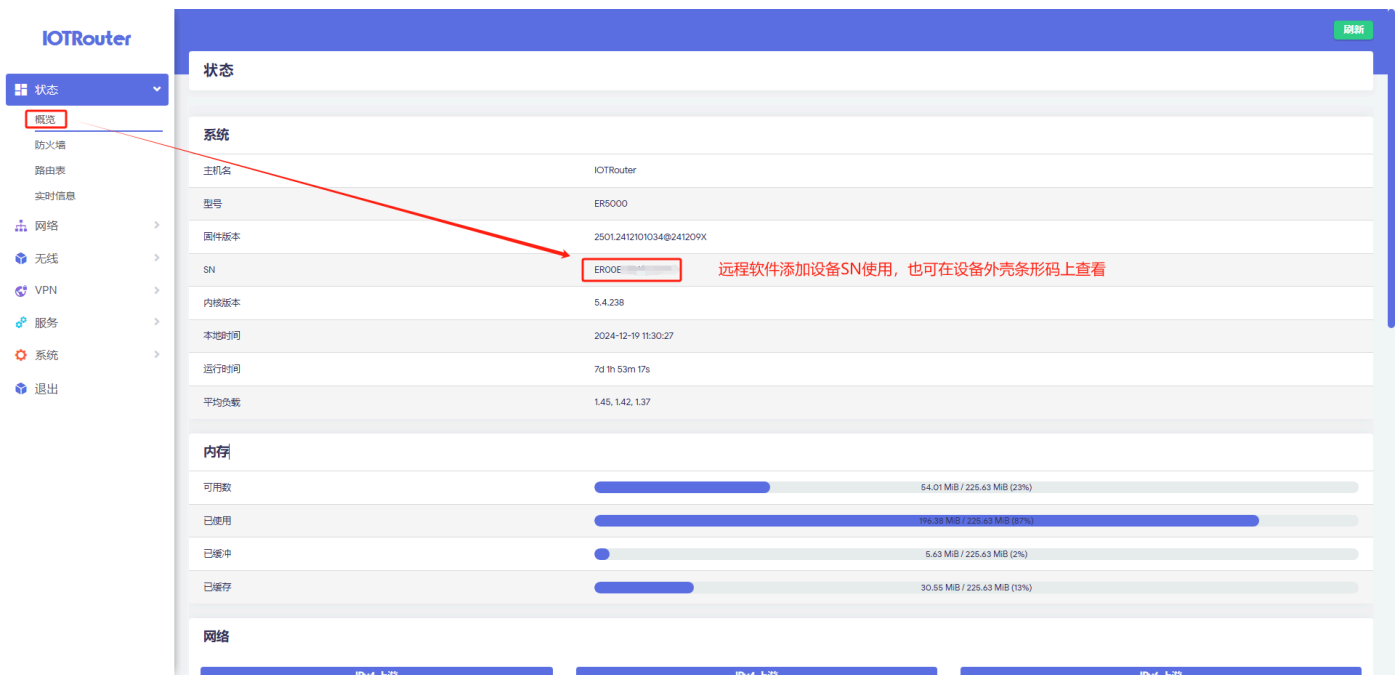

Remotely manage and add SN devices

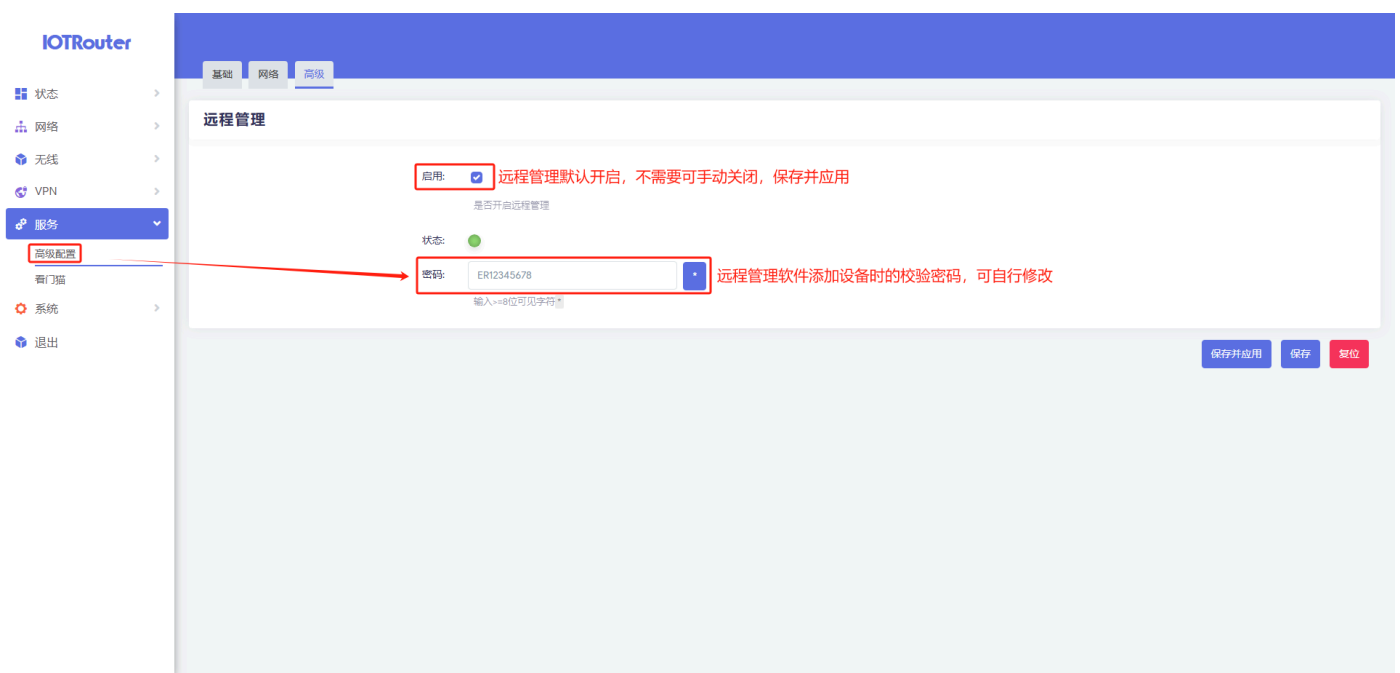


Add device passcode for remote management

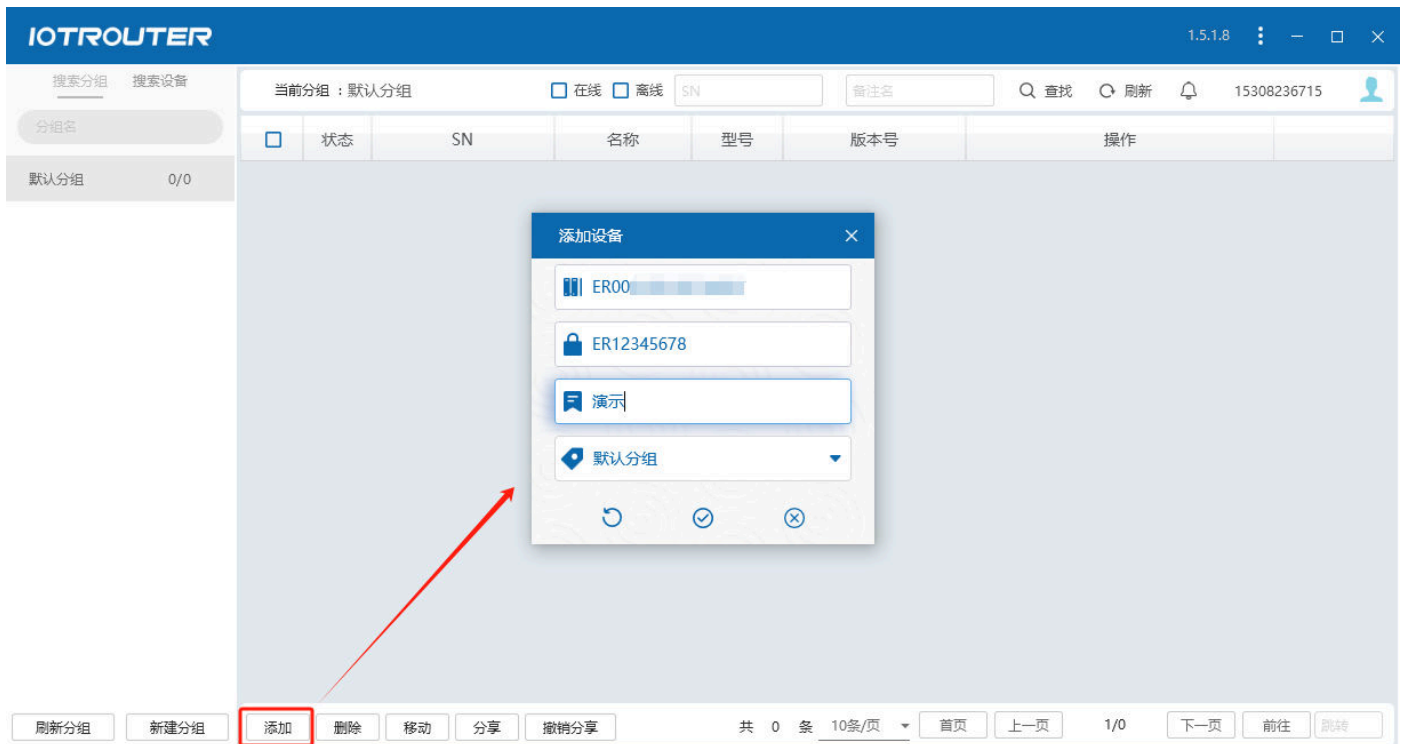


Add a device

4. Group management

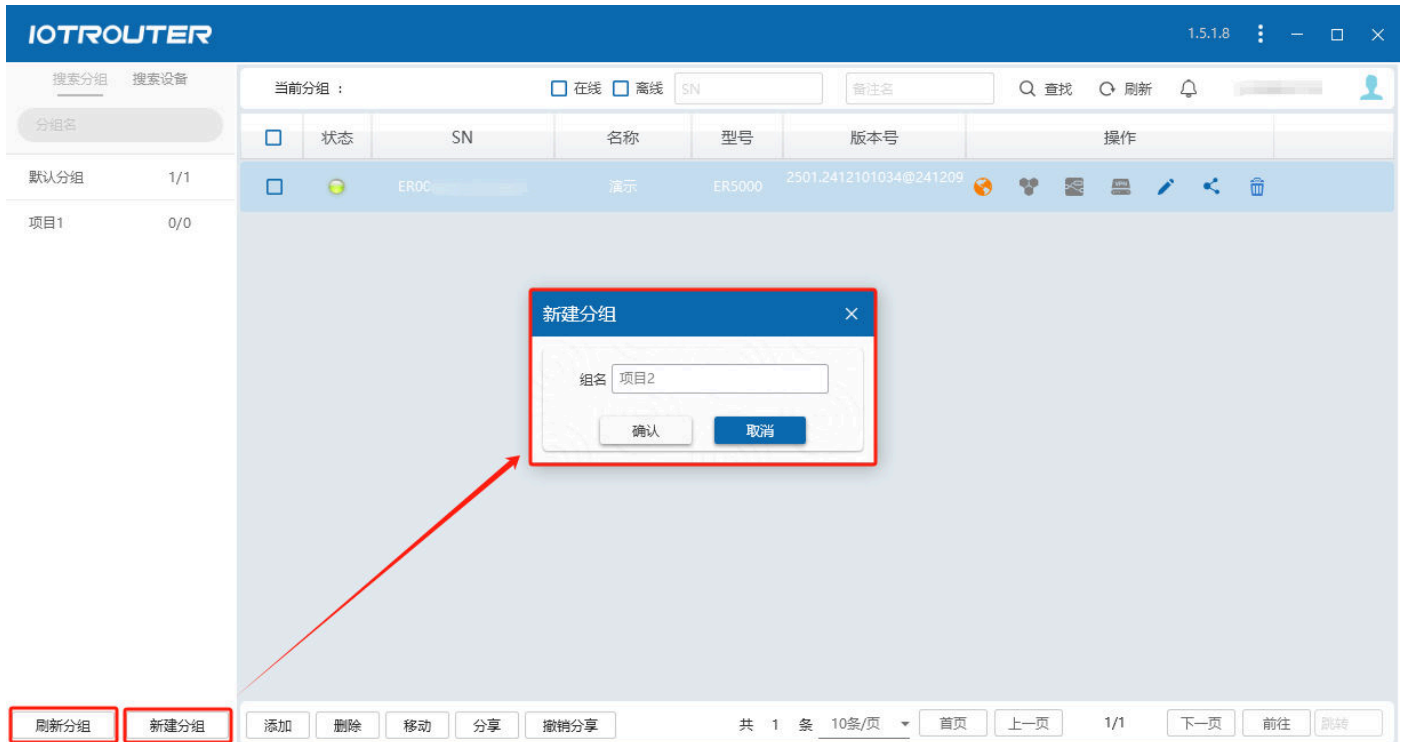

- You can create multiple groups to manage devices by group, and if the corresponding group is not refreshed on the left after the new group, you can click Refresh Group.

5. Device sharing

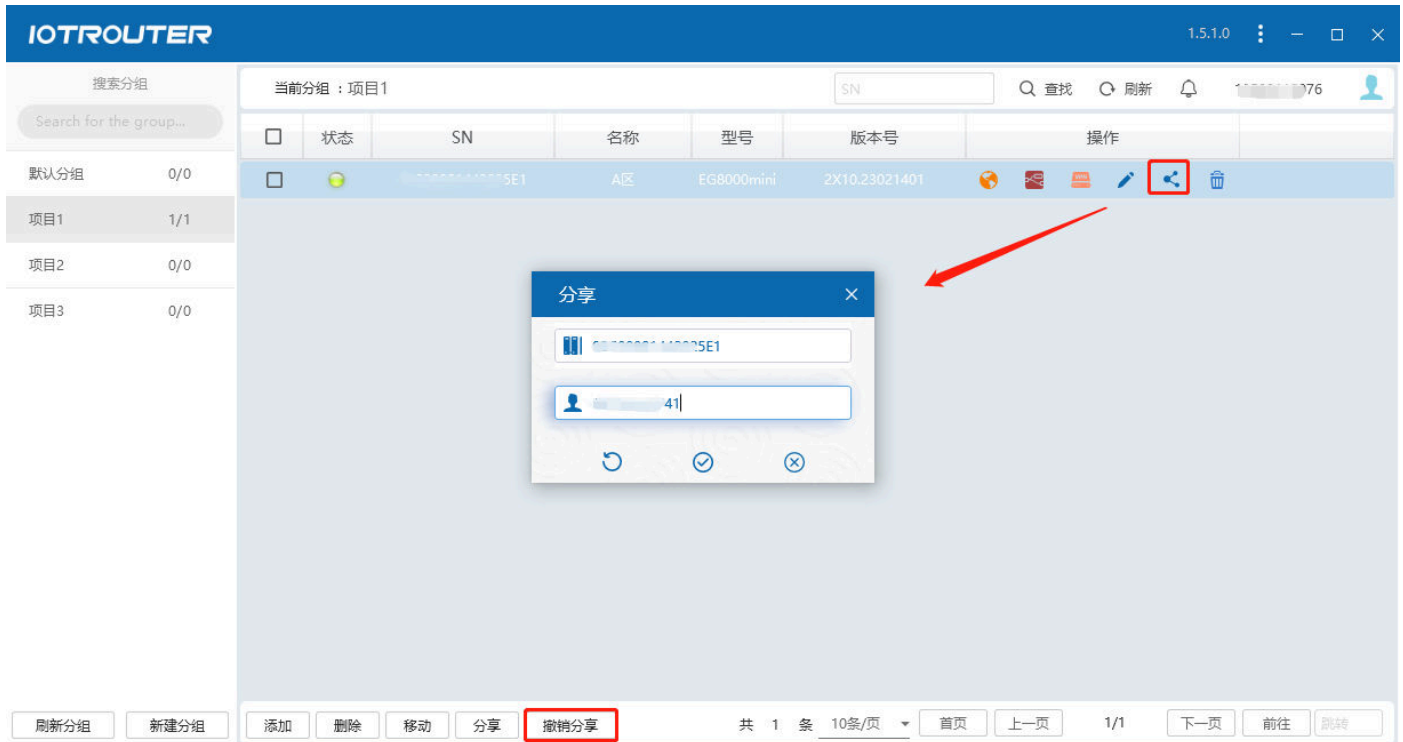


- Share the device: You can share the device added to the root account with a sub-account (a device can only be shared with one sub-account), and the sub-account can remotely configure and program the device.

6. Remote configuration

- Remote configuration: First of all, make sure that the device is online, the status is green, and clicking on the remote configuration will automatically open the browser to jump to the web configuration interface.

The screenshot shows the IOTROUTER web management interface. At the top, there's a navigation bar with the logo and version 1.5.1.8. Below it, a sidebar contains search and group management options. The main area features a table with the following columns: 状态 (Status), SN, 名称 (Name), 型号 (Model), 版本号 (Version), and 操作 (Action). A single device is listed with SN ER00E, name 演示 (Demo), model ER5000, and version 2501.2412101034@241209. The status icon is highlighted with a red box. Below the table, there are pagination controls showing 1 item out of 10 per page, and buttons for adding, deleting, moving, and sharing devices.

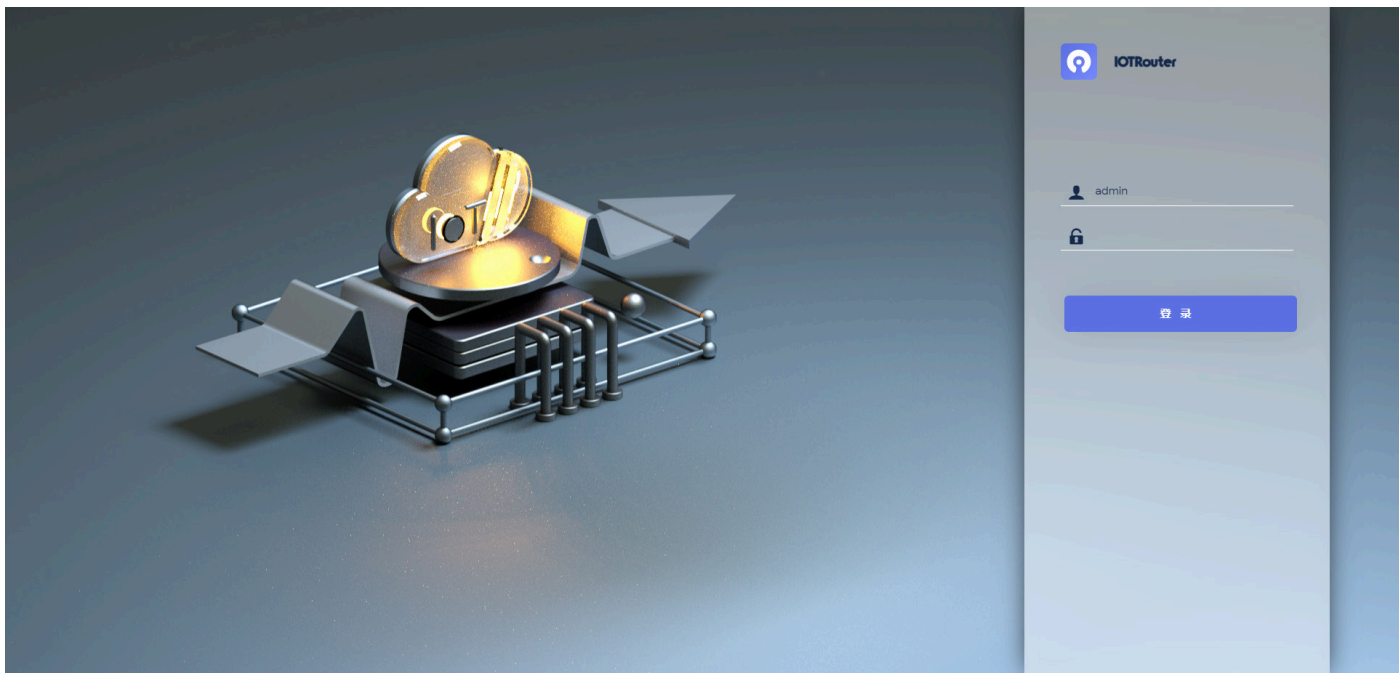

Version: 1.0

A LEADING PROVIDER OF INTEGRATED IT AND OT PRODUCTS

R&D Center :

CHENGDU IOTRouter TECHNOLOGY CO., LTD
No. 599, Section 1, Huafu Avenue, Shuangliu
District, Chengdu city, Sichuan Province, China

Website :

www.iotrouter.com

Mail :

agnes@iotrouter.com



WhatsApp